



A0948A

SERVICE PARTS LIST

THE AUSTIN-HEALEY 3000 (Series BN7 and BT7)

Item No.	DESCRIPTION	Commencing (E) 29D-H101		Qty. per Vehicle	MODIFICATIONS		REMARKS
		Part Number	Illus. No.		New Part Number	Change Point	
	Gearbox with Overdrive—continued						
1	Seal for valve operating shaft—oil	17H5815	38	1			
2	Distance collar for valve operating shaft	17H5809	39	1			
3	Lever—solenoid	17H5808	40	1			
4	Screw—lever to spindle	HZS0406	41	1			
5	Washer for screw (spring)	LWZ204	42	1			
6	Nut for screw	FNZ104	43	1			
7	Piston assembly—accumulator	17H5847	44	1			
8	Ring—piston	7H5849	45	2 sets			
9	Housing assembly—accumulator	17H5848	46	1			
10	Ring (rubber)	7H5846	47	2/1			} Quantity reduced at (O.D.) 22/3009/011000
11	Spring—accumulator pressure	17H5833	48	1			
12	Tube for spring	7H5845	49	1			
13	Piston assembly—operating	17H5849	50	2	17H5873	Com. (O.D.) 22/3009/608	
14	Ring—piston	7H5860	51	4 sets		Fin. (O.D.) 22/3009/607	
15	Ring—piston		81	2	17H5874	Com. (O.D.) 22/3009/608	
16	Valve—operating	17H5827	52	1			
17	Ball for valve	BLS110	53	1			
18	Plunger—ball	7H5837	54	1			
19	Spring for plunger	7H5836	55	1			
20	Plug for valve (screwed)	7H5820	56	1			
21	Washer for plug	7H5898	57	1			
22	Cam—oil pump	1B3650	58	1			
23	Plunger assembly—oil pump	7H5838	59	1			
24	Spring for plunger	7H5839	60	1			
25	Body—oil pump	7H5840	61	1			
26	Plug for body (screwed)	7H5841	62	1			
27	Screw—body to front casing	PMZ0308	63	2			
28	Washer for screw (spring)	LWN203	64	2			
29	Ball—valve	BLS108	65	1			
30	Plunger—ball	7H5837	66	1			
31	Spring for plunger	7H5836	67	1			
32	Washer for valve plug (copper)	7H5898	68	1			
33	Plug—valve	7H5820	69	1			
34	Strainer—oil pump	7H5842	70	1	17H5878	Com. (O.D.) 22/3009/8745	
35	Distance tube for strainer	7H5843	71	1			
36	Bolt for strainer	7H5844	72	1			
37	Washer for bolt (plain)	PWN103	73	1			} Fin. (O.D.) 22/3009/607
38	Washer for bolt (spring)	LWN203	74	1			