

GEARBOX AND OVERDRIVE

| Type | Range | Plate | Description | Number per Vehicle | Austin Part Number | Austin Service Journal Reference | | |
|------------------------|-------------------------------|--|--|--------------------|--------------------|----------------------------------|---------|------|
| | | | | | | Vol. | Section | Page |
| GEARBOX—3 SPEED | | | | | | | | |
| BN.1 | C.138031-140204 | | *Gearbox and overdrive assembly, R.H. Steering | 1 | IB 3647 | | | |
| | O/D WN 1260/1- WN 1260/763 | | *Gearbox and overdrive assembly, R.H. Steering (use IB 3690) ... | 1 | IB 3658 | x | | |
| | C.138031-140204 | | Gearbox and overdrive assembly, L.H. Steering | 1 | IB 3646 | | | |
| | O/D WN 1260/1- WN 1260/763 | | Gearbox and overdrive assembly, L.H. Steering (use IB 3689) ... | 1 | IB 3657 | | | |
| | O/D 28/1292/1 on | | *Gearbox and overdrive assembly, R.H. Steering | 1 | IB 3690 | | | |
| | | | Gearbox and overdrive assembly, L.H. Steering | 1 | IB 3689 | | | |
| | | B1 | Gearbox casing with studs, bushes for clutch operating shaft, grease nipples, filler and drain plugs ... | 1 | B3-257 | | | |
| | | | Dowel bolts to mounting plates ... | 2 | 2K 7717 | | | |
| | | | Nuts for bolts | 2 | 2K 3977 | | | |
| | | | Spring washers | 2 | 2K 5863 | | | |
| | | | Bolts to mounting plate | 6 | 2K 3141 | | | |
| | | | Nuts for bolts | 6 | 2K 3977 | | | |
| | | | Spring washers | 6 | 2K 5895 | | | |
| | | | Bushes for clutch operating shaft ... | 4 | 3H 1235 | | | |
| | | | Grease nipples | 2 | 2H 2791 | | | |
| | | B2 | Front cover | 1 | IB 3338 | | | |
| | | B3 | Joint washer | 1 | IB 3371 | | | |
| | | | Studs in gearbox casing | 7 | 2K 3449 | | | |
| | | | Nuts for studs | 7 | 2K 3976 | | | |
| | | | Spring washers | 7 | 2K 5319 | | | |
| | B4 | Cover for starter pinion | 1 | IB 3346 | | | | |
| | | Screws | 3 | 2K 3882 | | | | |
| | | Spring washers | 3 | 2K 1210 | | | | |
| | B5 | Oil filler plug | 1 | 2K 5830 | | | | |
| | B6 | Oil drain plug | 1 | 2K 5830 | | | | |
| | | Split pin for clutch pin drain hole ... | 1 | CPS 0608 | | | | |
| | B7 | Side cover for gearbox | 1 | IB 3626 | | | | |
| | B8 | Joint washer | 1 | IB 3372 | | | | |
| | | Setscrews to gearbox | 3 | 2K 3094 | | | | |
| | | Spring washers | 3 | 2K 5319 | | | | |
| | B9 | Change speed control box body ... | 1 | IB 3627 | | | | |
| | B10 | Joint washer to side cover | 1 | IB 3635 | | | | |
| | | Setscrew, long, side cover and control box to gearbox | 1 | 2K 3097 | | | | |
| | | Setscrews, short, side cover and control box to gearbox | 5 | 2K 3109 | | | | |
| | | Stud, side cover and control box to gearbox | 1 | 2K 3448 | | | | |
| | | Nut for stud | 1 | 2K 3976 | | | | |
| | | Spring washers for setscrews and nuts | 7 | 2K 1211 | | | | |
| | B11 | Change speed lever, R.H. Steering ... | 1 | IB 3659 | | | | |
| | | Change speed lever, L.H. Steering ... | 1 | IB 3630 | | | | |
| | | Knob for lever | 1 | IB 3637 | | | | |
| | | Locknut for knob | 1 | 2K 9744 | | | | |
| | | Gaiter for lever, rubber | 1 | 2F 3087 | | | | |
| | | Locating screw for lever | 1 | 2F 3166 | | | | |
| | | Lockwasher for screw | 1 | 2F 3040 | | | | |

* Can be supplied reconditioned on Home Market, quote part numbers IB 3647R, IB 3658R or IB 3690R.